
Assembly instructions BS15-2








Overview of parts

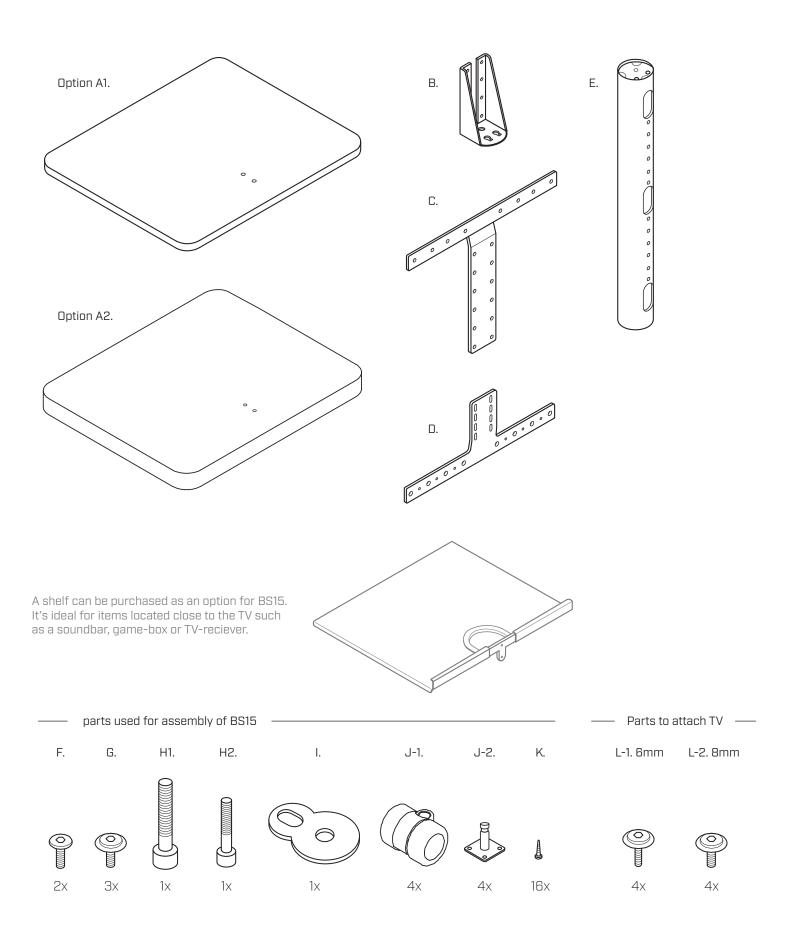


A1. A2. J-2. I-2.

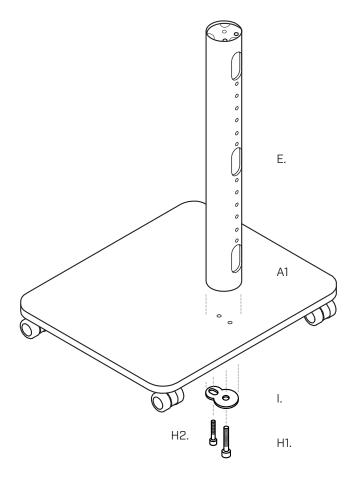


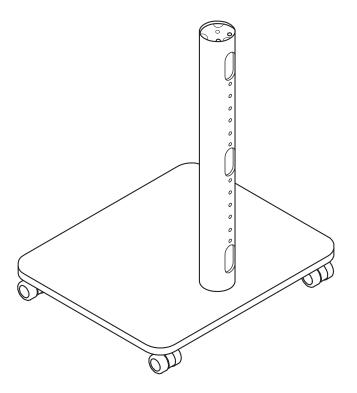


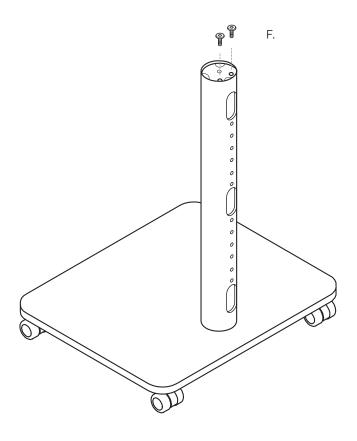

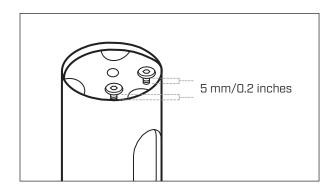

Don not screw all the way to the bottom. Leave a small gap of approximately 5 mm/0.2 inches.

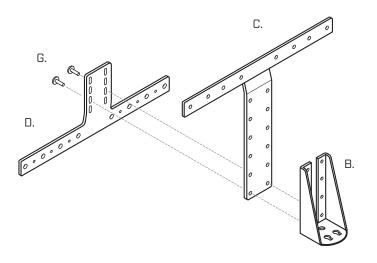

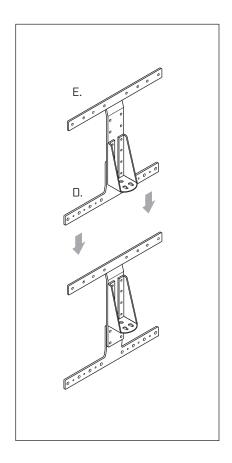


You can change the initial height of the TV on BSI5 by adjusting the position of F. and E. on to D. This option requires additional screws which need purchase.


L1/L2

L1/L2


Adjust the position of F. and E. according to the specs of the TV.

You also change the initial height of the TV on BS15 by swopping the position of E. and F. on to D. 4

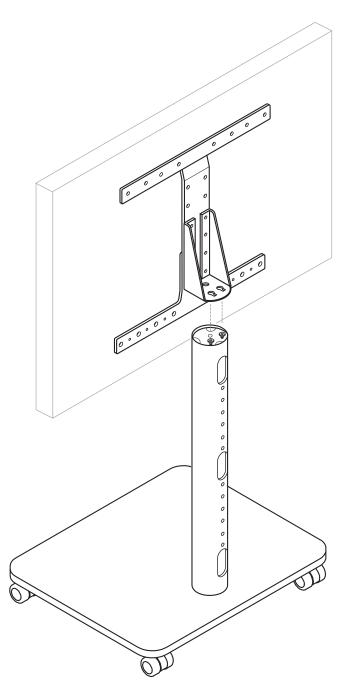


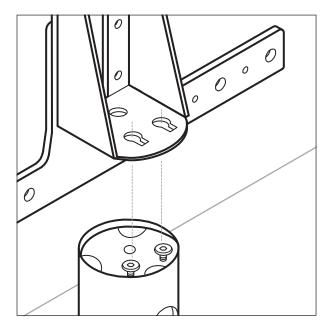


Gently align TV and top of BS15 to the bottom part. Then lower the TV and top of BS15 so the two screws passed through the 'keyholes'.

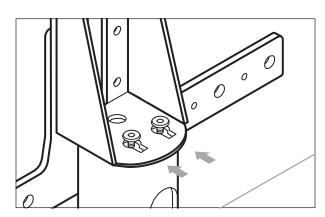


Gently push the TV and top of BS15 so the two screws are positioned in the narrow end of the 'keyholes'.

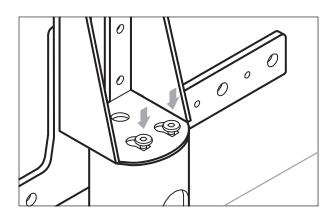

Align and fasten screws.

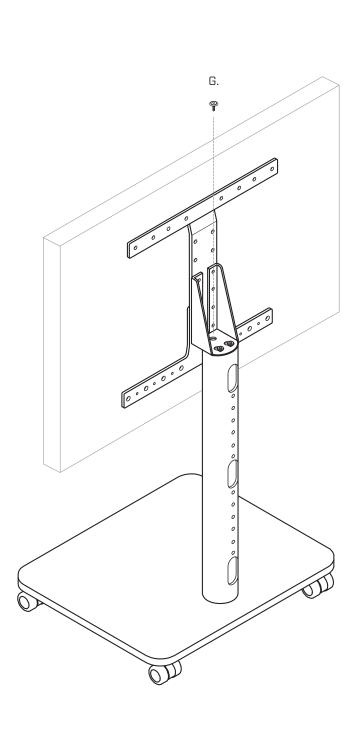

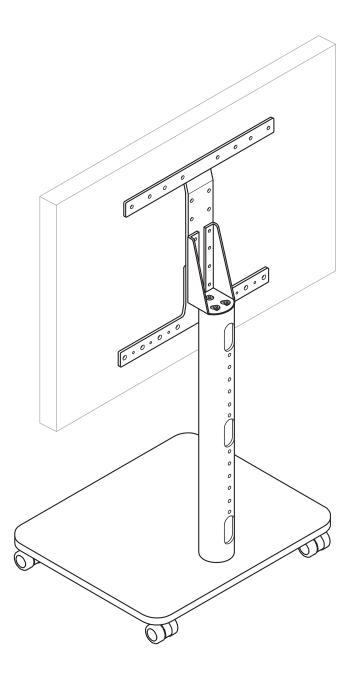

www.bulowstand.com



