



# Assembly instructions

## BS19




Bülow Stand


# Overview of parts

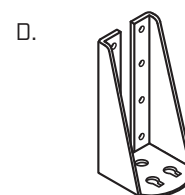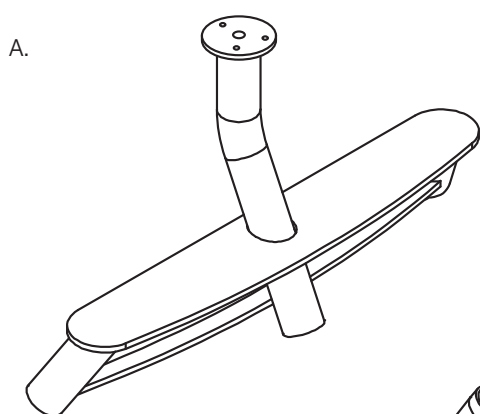

C.

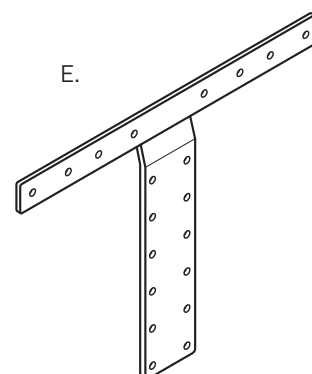

B.

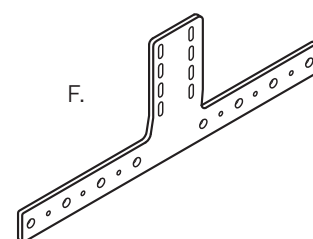

— parts used for assembly of BS19 — Parts to attach TV —

G.

H.

I.

J-1. 6mm

 
J-2. 8mm



2x  
(10mm)



1x  
(10mm)




2x  
(16mm)



4x  
(6mm)




4x  
(8mm)


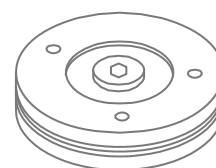


A swiveling can be purchased as an option for BS19. It enables the TV to move sideways on top of BS19.

1


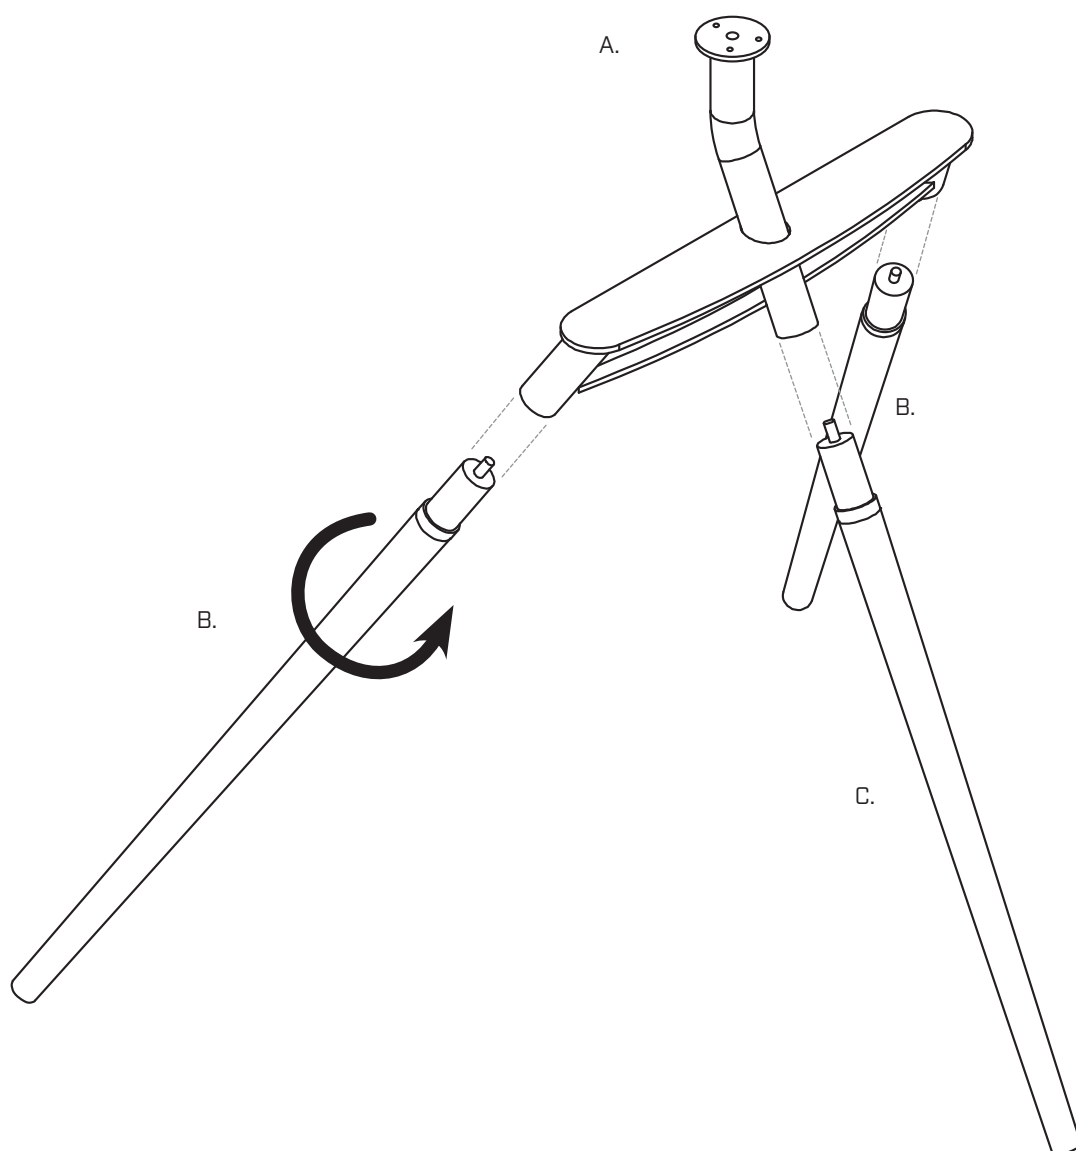


# 2

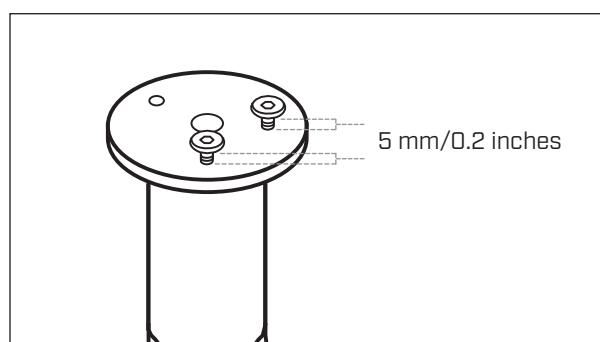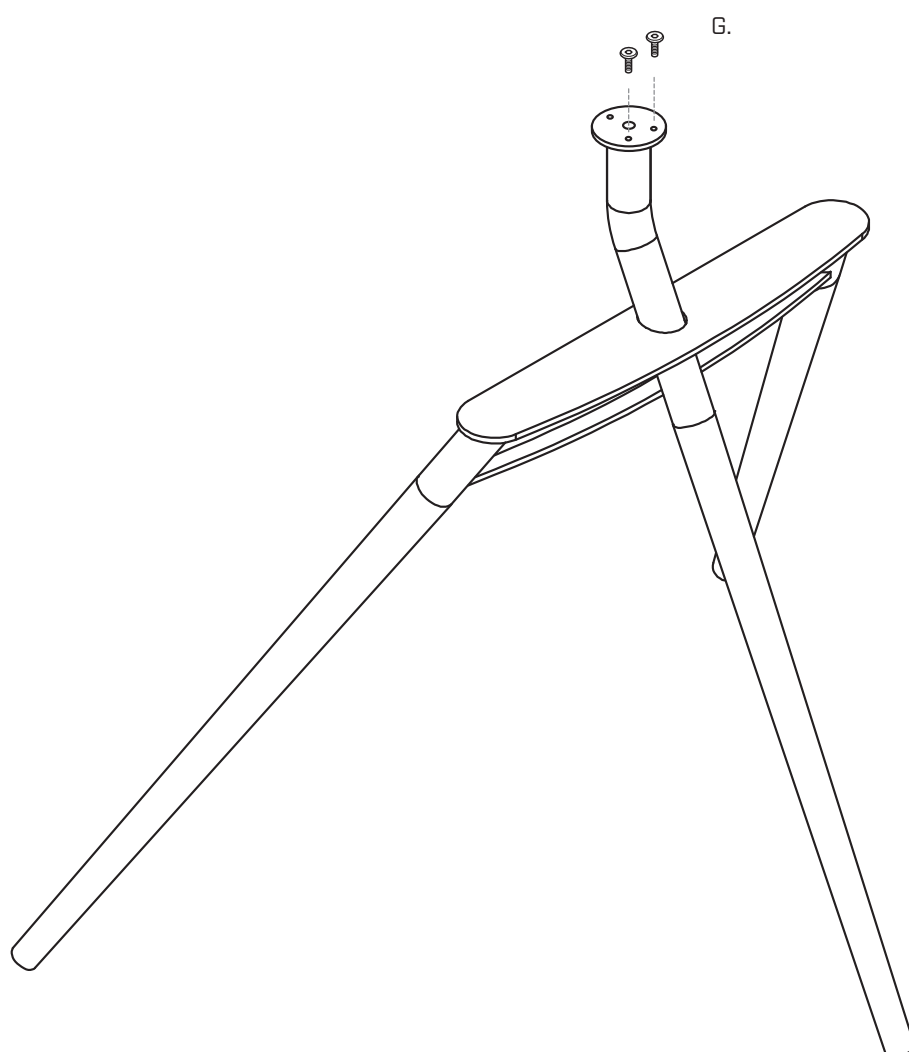


Don not screw all the way to the bottom.  
Leave a small gap of approximately 5 mm/0.2 inches.


# 3

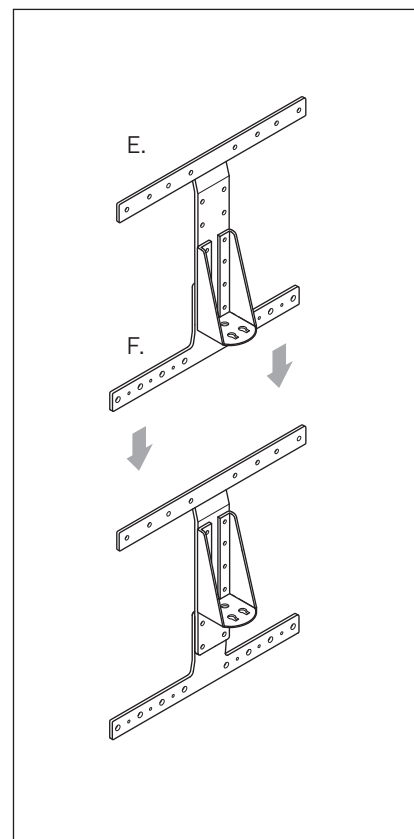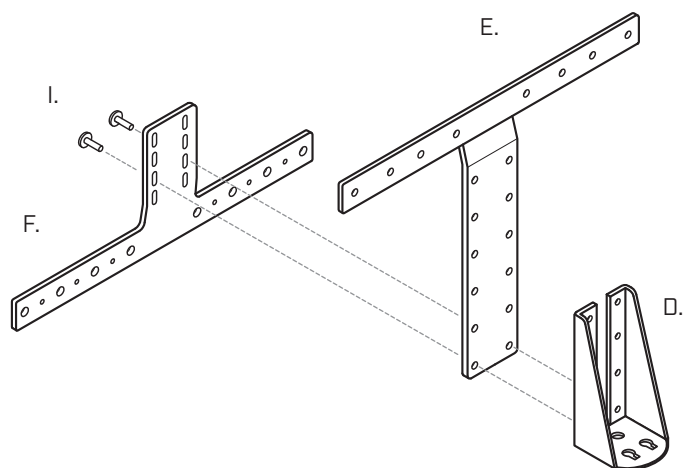

You can change the initial height of the TV on BS19 by adjusting the position of D. and E. on to F. This option requires additional screws which need purchase.


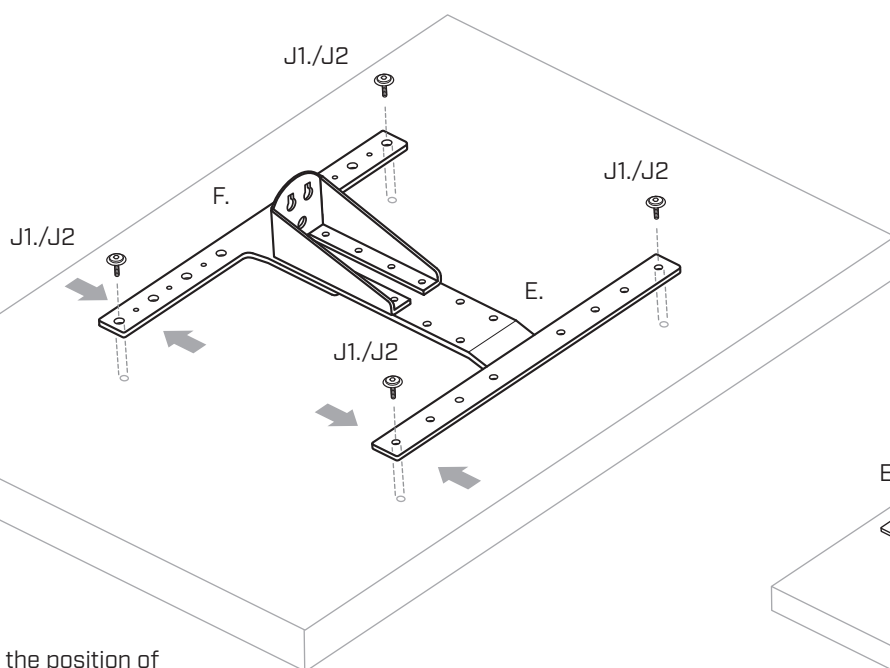


Adjust the position of F. and E. according to the specs of the TV.

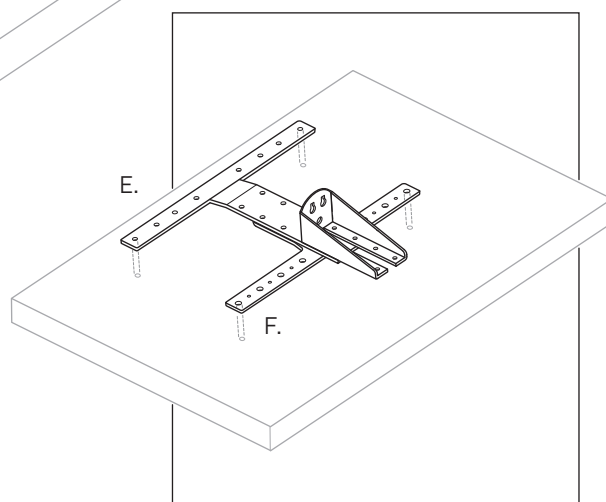


You also change the initial height of the TV on BS19 by swopping the position of D. and E. on to F.


# 4

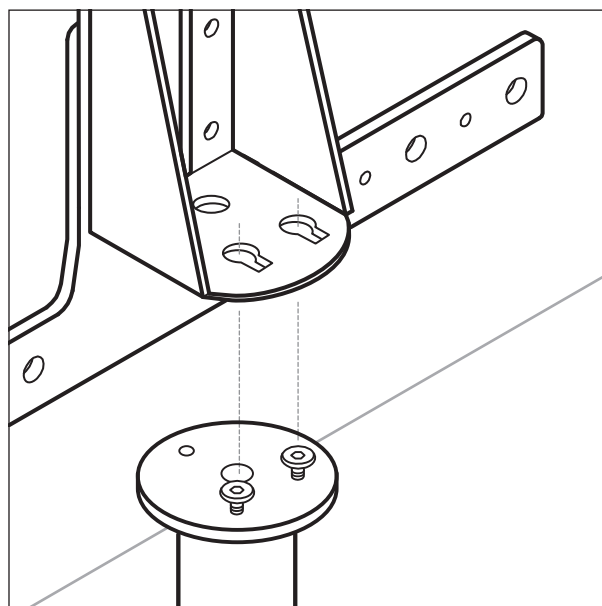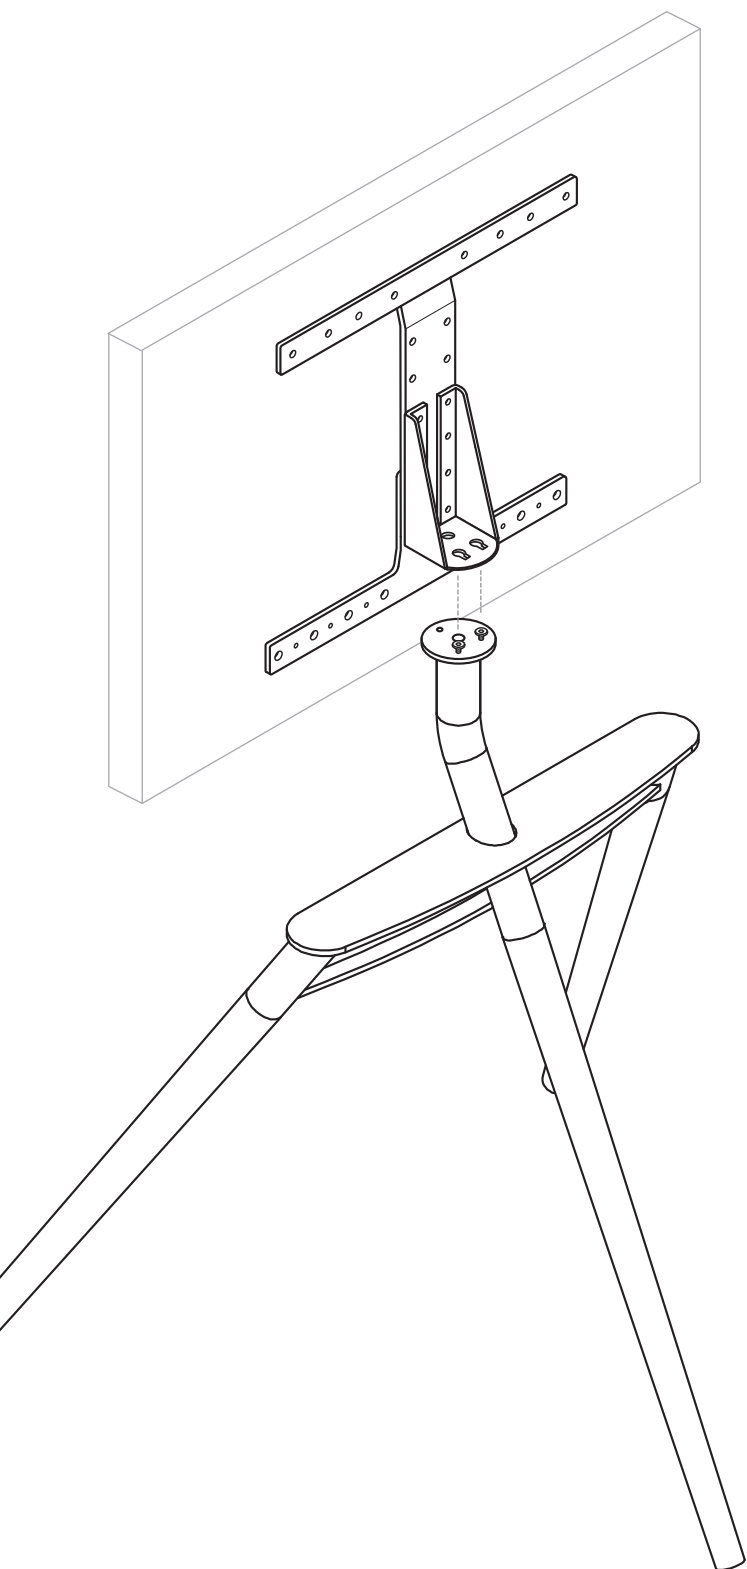

Gently align TV and top of BS19 to the bottom part. Then lower the TV and top of BS19 so the two screws passed through the 'keyholes'.

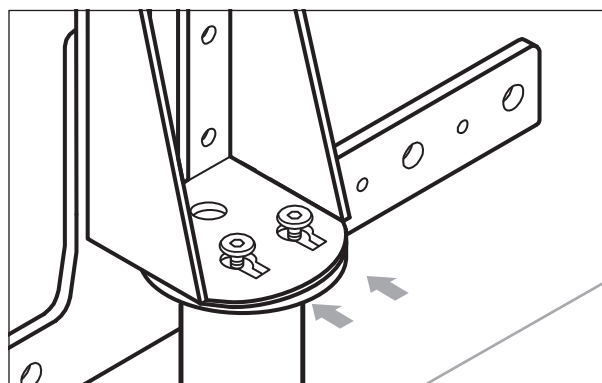


Gently push the TV and top of BS19 so the two screws are positioned in the narrow end of the 'keyholes'.

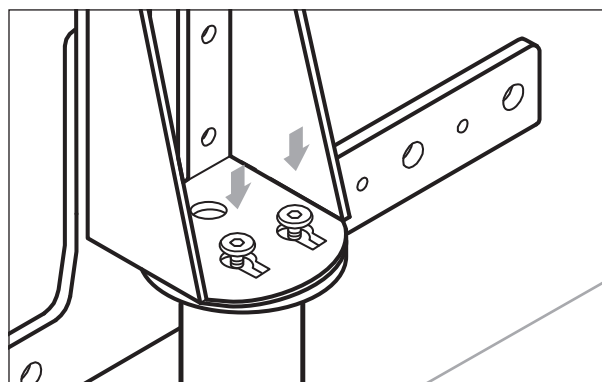

Align and fasten screws.

5

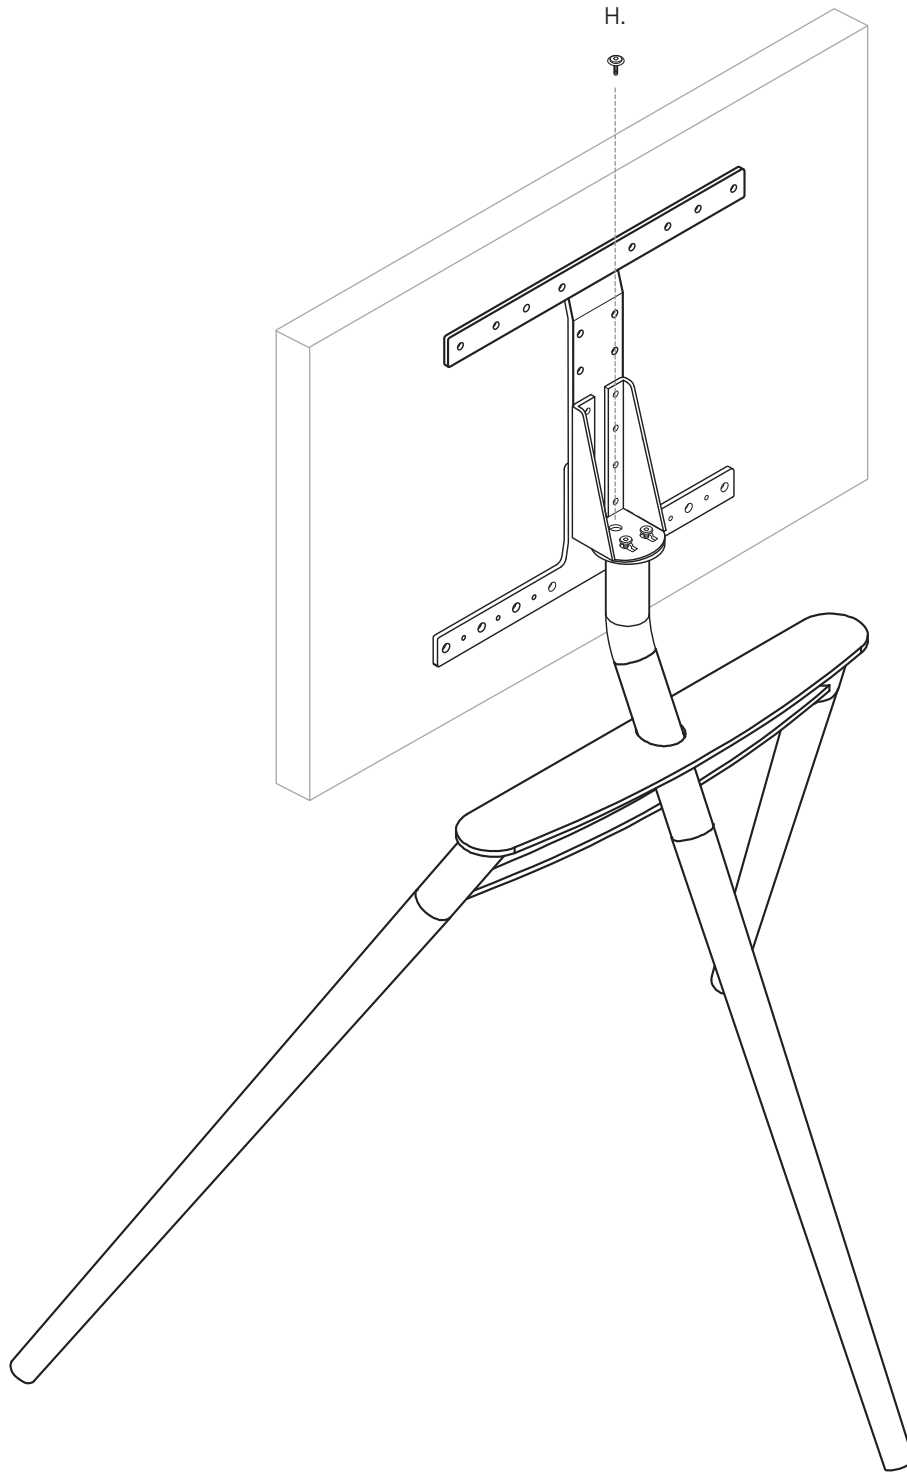

[www.bulowstand.com](http://www.bulowstand.com)



Bulow Stand