



The method of how to synchronize RF remote with screen

Cut off the screen power.



Plug in the screen power, press the "up" button of the RF remote within 3 second until the LED light flash.



Confirm whether the weight bar is moving(down> up), if the weight bar is down a little,then up, that is to say, the RF remote is synchronized with screen.

If the RF remote is not synchronized with screen, then repeat the above steps.