 


Installation manual

M Motorized TV Lift Ceiling

EAN: 7350105216787

- (en) Installation Manual
- (ar) تثبيت التلفاز على السقف
- (cz) Instalační manuál
- (de) Installationsmanual
- (de) Installationsanleitung
- (eo) Paigaldusjuhend
- (el) Οδηγίες εγκατάστασης
- (es) Manual de instalación
- (fi) Asennusohje
- (fr) Installation Manuel
- (he) הנקתה יירדם
- (hu) Szerelési kézikönyv
- (it) Manuale di installazione
- (jp) 取り付け説明書
- (kr) 설치 설명서
- (lt) Montavimo instrukcija
- (lv) Uzstādīšanas rokasgrāmata
- (nl) Installatie handleiding
- (no) Installasjonshåndbok
- (pl) Instrukcja instalacji
- (pt) Manual de instalação
- (ro) Manual de instalare
- (ru) Инструкция по установке
- (sk) Inštalčný manuál
- (sl) Navodila za montažo
- (sv) Installationsmanual
- (tr) Montaj kılavuzu
- (zh) 安装手册

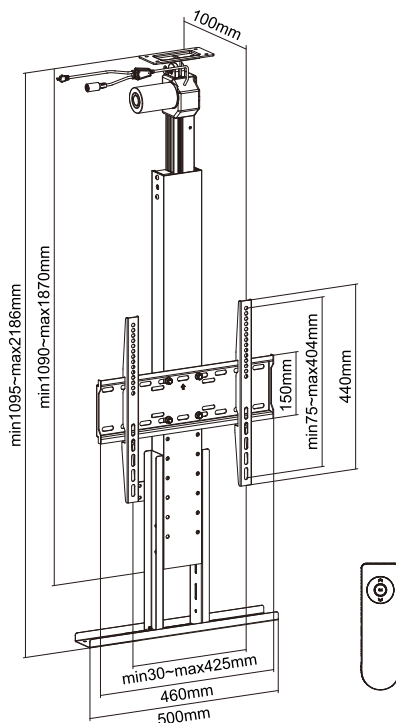

en **IMPORTANT!**
Your Plasma, LCD, TV, Projector, Projector Screen or other HIFI equipment represents a considerable value.
If screws are included they may not be suitable for the material of your wall, ceiling or floor.
Replace the screws with suitable ones if needed.
In case you are unsure regarding any aspects of the mounting of this product please Consult a professional.

ar **أهم!**
إن تركيب البلازما أو LCD أو التلفاز أو جهاز العرض أو شاشة العرض أو غيرها من أجهزة HIFI-تعتبر قيمة كبيرة.
إذا كانت المسماريات موجودة، فقد لا تكون مناسبة للمادة التي على الجدار أو السقف أو الأرضية.
استبدل المسماريات بمسماريات مناسبة إذا لزم الأمر.
في حالة عدم التأكد من أي جوانب تركيب هذا المنتج، يرجى استشارة أخصائي.

cz **DŮLEŽITÉ!**
Váš plazmový nebo LCD televizor, projektor, plátno a další elektrotechnické vybavení je vysoce hodnotné.
Pokud jsou součástí balení produktů šrouby, zkontrolujte, zda jsou vhodné pro upevnění ke stěně, stropu nebo podlahě v místě instalace.
V případě, že potřebujete přibírat šrouby vyhovovat, vyměňte je.
Pokud budete mít při montáži tohoto produktu pochyby, obraťte se na zkušeného odborníka.

da **VIGTIGT!**
Den plasmaskærm, LCD-skærm, tv, projektor, projektorsskærm eller andet HIFI-udrustning repræsenterer en betydelig værdi. Hvis der medfølger skruer, passer de muligvis ikke til materialet i væggen, loftet eller gulvet. Udskift skruerne med passende skruer, hvis det er nødvendigt.
Hvis du er i tvivl om noget i forbindelse med monteringen af produktet, skal du kontakte en ekspert.

nl **BELANGRIJK!**
Uw Plasma, LCD, TV, Projector, Projector scherm of andere HIFI-apparatuur vertegenwoordigt een aanzienlijke waarde.
Het kan zijn dat de bijgeleverde schroeven niet geschikt zijn voor uw toepassing. In dat geval dient u ze te vervangen door schroeven die wel geschikt zijn. Twijfelt u, raadpleeg dan een professional.

ee **TÄHTSI!**
Teie teler, projektor, projektori ekrani või muu HIFI seade on suure väärtusega.
Kui kinnitused on komplektis paigalduskruvid, siis ei pruugi need sobida Teie seinale, lüüsi või põrandale materjaliga. Vajadusel vahetage kruvid sobivate vastu.
Kui Te ei ole seadme paigaldamisel kindel, siis konsulteerige spetsialistiga.

de **ACHTUNG!**
Ihre Plasma-, LCD-, TV-Gerät, Ihr Projektor, Ihre Leinwand oder sonstige HIFI-Ausrüstung stellt einen beträchtlichen Wert dar. Die möglicherweise im Lieferumfang enthaltenen Schrauben sind für den Einsatz nicht für das Material Ihrer Wände, Decken oder Böden geeignet. Ersetzen Sie sie bei Bedarf durch geeignete Schrauben.
Wenn Sie bezüglich der Montage des Produkts unsicher sind, wenden Sie sich an einen Fachmann.

el **ΣΗΜΑΝΤΙΚΟ!**
Οι τηλεοράσεις, Plasma, LCD, ο κανονικός τηλεοράτης, οι οθόνες προβολής ή άλλες συσκευές HIFI έχουν μια αξιοσημείωτη αξία. Αν περιλαμβάνονται βίδες, ίσως να μην είναι κατάλληλες για το υλικό του τοίχου, τουเพดาน ή του πάτωμα. Αντικαταστήστε τις βίδες με κατάλληλες αν είναι απαραίτητο.
Στην περίπτωση που δεν είστε σίγουροι για κάποια ζητήματα σχετικά με την προετοιμασία αυτού του προϊόντος, παρακαλούμε συμβουλευτείτε έναν ειδικό.

es **¡IMPORTANTE!**
Los equipos de plasma o LCD, los televisores, proyectores y pantallas de proyección, así como otros equipos de alta fidelidad suponen una inversión considerable. Si incluyen tornillos, puede que no sean adecuados para el material del que están formados la pared, el techo o el suelo. Sustituya estos tornillos por otros más adecuados si es preciso.
Si no está seguro sobre cualquier aspecto del montaje de este producto, consulte a un profesional.

fi **TÄRKEÄ!**
Plasma- tai nestekidenäyttötien, televisoiden, projektorien ja niiden valokuvakäyttöiden sekä muiden hiifilaitteiden arvo on huomattava. Laiteiden mukana toimitettavat ruuvit eivät välttämättä sovellu seinien, katto tai lattian materiaaliin. Korvas ne tarvittaessa sopivilla ruuveilla.
Mikäli olet epävarma mistä tahansa näiden tuotteiden kinnittämiseen liittyvästä seikasta, ota yhteyttä asiantuntijaan.

fr **IMPORTANT!**
Vos écrans plasma, LCD, télévisions, projecteurs, écrans de projection ou autre matériel Hi Fi ont une valeur considérable. Les vis fournies peuvent ne pas être compatibles à la nature de vos murs, plafonds et sols. Remplacez-les par des vis adaptées.
Si vous avez des doutes quant au montage de ce produit, veuillez consulter un professionnel.

hu **FONTOS!**
LCD-TV-d, projektorok, vetítőkészülék vagy egyéb műszaki berendezések tekintélyes értéket képviselnek. Ha a csavarokat tartalmazzuk, akkor sem biztos, hogy alkalmas a berendezés, hogy falra, mennyezetre, vagy a padlóra rögzítsék. Cseréik a csavarokat a megfelelőre, ha szükséges. Abban az esetben, ha nem biztos a termék beszerelésével kapcsolatban, forduljon szakemberhez.

it **IMPORTANTE!**
I vostri plasma, LCD, TV, proiettori, schermi di proiezione o altri apparecchi Hi-Fi rappresentano un notevole investimento. Le viti di dotazione potrebbero rivelarsi non adatte per il materiale della parete, del soffitto o del pavimento. Sostituitele quindi con viti più adatte in caso di necessità.
Nel caso riscontrate problemi nel montaggio di questo prodotto, consultate un tecnico specializzato.

jp **重要!**
あなたのプラズマ、LCDは、テレビ、プロジェクタ、プロジェクタースクリーンまたは他のHIFI装置はかなりの価値を有します。
ネジが含まれている場合、彼らはあなたの壁、天井や床の材質に適していないかもしれません。
必要に応じて適切なものでネジを取り付けます。
ケースでは、本製品の取り付けのいずれかの側面に黒い点があるプロに相談してください。

no **VIKTIG!**
Din plasma, LCD, TV, projektor, projektorsskærm eller annet HIFI-utstyr har betydelig verdi. Hvis skruer følger med, er det ikke sikkert at de passer til materialet i vegg, taket eller gulvet. Bytt skruene i skruer som er egnet om nødvendig.
Hvis du er usikker når det gjelder monteringen av dette produktet, må du kontakte en profesjonell.

pl **UWAGA!**
Monitor plazmowy, LCD, telewizor, projektor, ekran projekcyjny lub inny sprzęt HIFI stanowi znaczną wartość. Jeśli dołączono do niego śruby montażowe, mogą one nie być odpowiednie do materiału, z którego wykonane są dane ściany, sufit lub podłoga. W razie potrzeby należy je zastąpić odpowiednimi śrubami.
W razie jakichkolwiek wątpliwości dotyczących montowania tego urządzenia należy zasięgnąć porady u specjalisty.

pt **IMPORTANTE!**
O seu Plasma, LCD, TV, projektor, tela de projecção ou outro equipamento de HIFI representa o valor considerável.
Se os parafusos estão incluídos estes podem não ser adequados para o material da sua parede, teto ou chão.
Substitua os parafusos com os adequados, se necessário.
Em caso de dúvida sobre quaisquer aspectos do produto montado, consulte um profissional.

li **SVÄRIG!**
Jūsų Plasma, LCD, TV, projektor, projektorja ekranas vai kita HIFI iekartas veido įvertinamą vertbę.
Jeigu škrūvės yra būt nepatvirtintos jūsų sienai, griestui vai grindis materiamui. Nomainait škrūves ar piemėrotām škrūvėm, je nepieciešams.
Gadījumā, ja jūs nesat pārliecināts par jebkuriu šio produkta montāžas un stiprinājumu aspektiem, lūdzām konsultēties ar speciālistu.

lv **SVARBU!**
Jūsu plazmasma, LCD, LED televizors, projektoris, projektoris ekrans vai cita HIFI ierīce ir diezgan liela vērtība.
Ja ir pievienoti skrūves, tās var nebūt piemērotas jūsu sienai, griestam vai grīdas materiālam.
Ja ir nepieciešams, jāaizvieto skrūves ar piemērotām.
Ja ir jebkādas šaubas par jebkādu šī produkta montāžas aspektu, lūdzām konsultēties ar speciālistu.

ro **IMPORTANT!**
Plasma ta, LCD, TV, projector, ecran de proiectie sau alte echipamente HIFI reprezintă o valoare considerabilă.
În cazul în care suruburile sunt incluse ele nu pot fi potrivite pentru materialul peretelui dvs., tavan sau podea.
Înlocuiți șuruburile cu cele adecvate, dacă este necesar.
În cazul în care nu sunteți sigur cu privire la orice aspecte ale montării acestui produs vă rugăm să consultați un profesionist.

ru **ВНИМАНИЕ!**
Каком бы оборудованием HIFI вы ни пользовались, будь то плазменный, ЖК или стандартный телевизор, проектор или проекционный экран, - все они представляют значительную ценность. Не всегда крепежные, прилагаемые в комплекте, подходят к материалу ваших стен, потолка или пола. При необходимости заменить их на более подходящие.
Если у вас есть какие-либо сомнения относительно того, как крепить данный продукт, пожалуйста, проконсультируйтесь у квалифицированного специалиста.

sv **VIKTIG!**
Den plasmaskärm, LCD-skärm, TV, projektor, projektorsskärm eller annan HIFI-utrustning representerar ett ansenligt värde. Om skruvar medföljer utrustningen är det inte säkert att de passar för materialet i väggen, taket eller golvet. Byt ut skruvarna mot lämpliga skruvar om så krävs. Kontakta en expert om du är osäker på något i samband med monteringen av produkten.

sk **DŮLEŽITÉ!**
Váš plazmový alebo LCD televizor, projektor, plátno a ďalšie elektrotechnické vybavenie je vysoko hodnotné.
Pokiaľ sú súčasťou balenia produkty skrutky, skontrolujte, či sú vhodné pre upevnenie k stene, stropu alebo podlahe v mieste inštalácie.
V prípade, že nebudú pribalené skrutky vyhovovať, vymeňte ich.
Pokiaľ budete mať pri montáži produktu pochyby, obráťte sa na skúseného odborníka.

si **POMEMBNO!**
Vaš Plasma, LCD, TV, projektor, projekcijsko plátno ali drugo HIFI oprema predstavlja pomembno vrednost.
Če so vključeni vijaki in smejo biti primerni za material svojega stena, strop ali tla. Ponovno namestite vijake z ustreznimi izale. Če je potrebno.
V primeru, da se pripraviš o vseh vidkih ugradnje tega izdelka se obrnite na strokovnjake.

tr **ÖNEMLİ!**
Plasma, LCD, TV, Projektor, Ekranınız veya diğer HIFI cihazınız son derece değerlidir. Birlikte verilen vidalar duvar, tavan veya döşeme teçhizatınıza uygun olmayabilir. Gerektiğinde vidaları uygun olanlarla değiştirin.
Bu ürünün montajı hakkında her hangi sorularınız olmasa halinde biz uzmanlar yardim alın.

zh **重要提示!**
您的等离子、LCD、TV、投影机、投影屏幕或其它HIFI设备都有不菲的价值。
如果附带有螺钉，它们可能不适合您的墙壁、天花板或地板。
如果需要，请视螺钉更换为适当的型号。
如果对本产品安装的任何方面有疑问，请咨询专业人员。

WARRANTY CARD

MULTIBRACKETS™ Limited Warranty
Multibrackets warrants its products to be free of defects in material and workmanship for the product's Warranty Period. The Warranty Period commences on the original purchase date of the product.

All Multibrackets products are covered by a limited product warranty.

 
 
 
 
 
 
 
- **FIVE (5) years** for metal video monitor mounts, tall racks and non-electrical rack accessories
- **TWO (2) years** for gasfills and sit-stand workstations
- **ONE (1) year** for all motorized and/or automated products, plastic speaker mounts, all speaker stands, all furniture, all wood (MDF) accessories

For warranty claims made during the Warranty Period, MULTIBRACKETS will replace any defective product free of charge. Should a part on your Multibrackets product fail, please create an RMA case on www.multibrackets.com/support to make a warranty claim. We will await your documentation and then discuss the problem with you and once we confirm the product is under warranty, we will ship replacement parts to you. This Limited Warranty does not cover the costs of removing and replacing defective parts from your Multibrackets product. So if your problem requires a repair technician, you must pay any labor charges.
This Limited Warranty extends only to the original purchaser of the product and is automatically void if your Multibrackets product is modified in any way, improperly installed, taxed beyond its stated weight capacity or otherwise misused or abused. All Multibrackets products are intended for indoor use only and any

outdoor use voids this limited Warranty. The Limited Warranty for wall and ceiling mounts is void if the mount is moved from its initial installation. To the maximum extent permitted by applicable law, Multibrackets disclaims any other warranties, express or implied, including warranties of fitness for a particular purpose and warranties of merchantability. Multibrackets will not be liable for any damages whatsoever arising out of the use or inability to use its products, even if Multibrackets has been advised of the possibility of such damages. To the maximum extent permitted by applicable law, Multibrackets disclaims any responsibility for incidental or consequential damages.

Multibrackets™ Stockholm Sweden 2016.
www.multibrackets.com


The content of this manual is manual in subject to change without further notice. The latest version of this manual can be found online under the product name on the website: www.multibrackets.com

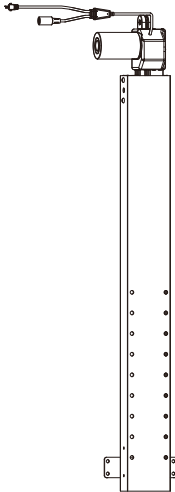 A (x1)	 B (x1)		 C (x2)	
	 D (x2)		 E (x1)	
	 F (x1)		 G (x1)	
	 H (x1)		 I (x1)	
 J (x1)	 K (x1)	 L (x4) M6X6	 M (x4) M6X10	 N (x4) M8X15
 O (x4) D8	 P (x4) M8	 Q (x12) ST5.5X16	 R (x1)	
 S (x1) 13mm		 T (x1) 4mm		 M-A (x4) M6x14
				 M-B (x4) M8x16
 M-C (x4) M6x30	 M-D (x4) M8x35	 M-E (x4) D8	 M-F (x4) Ø15xØ8x5	 M-G (x4) Ø15xØ8x15


1

Note:

 
In order to avoid collision and wire pulls, keep the control box and all cables away from the TV lift.

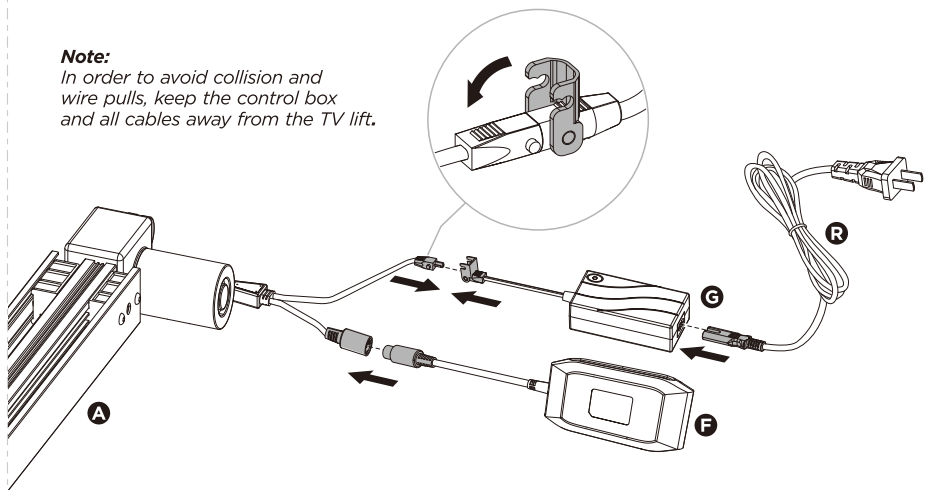


2

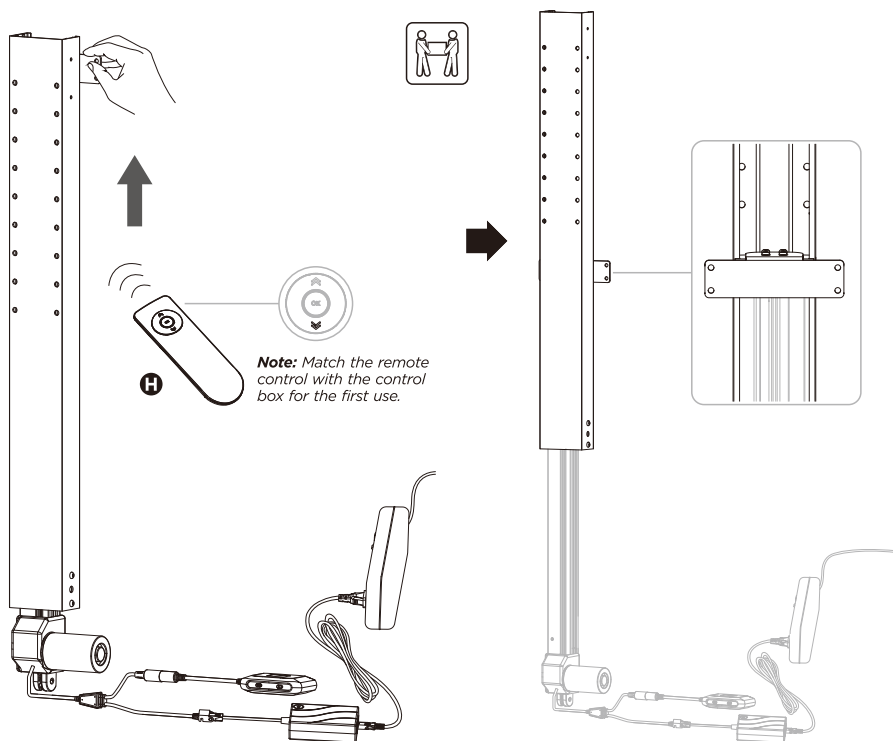 

3

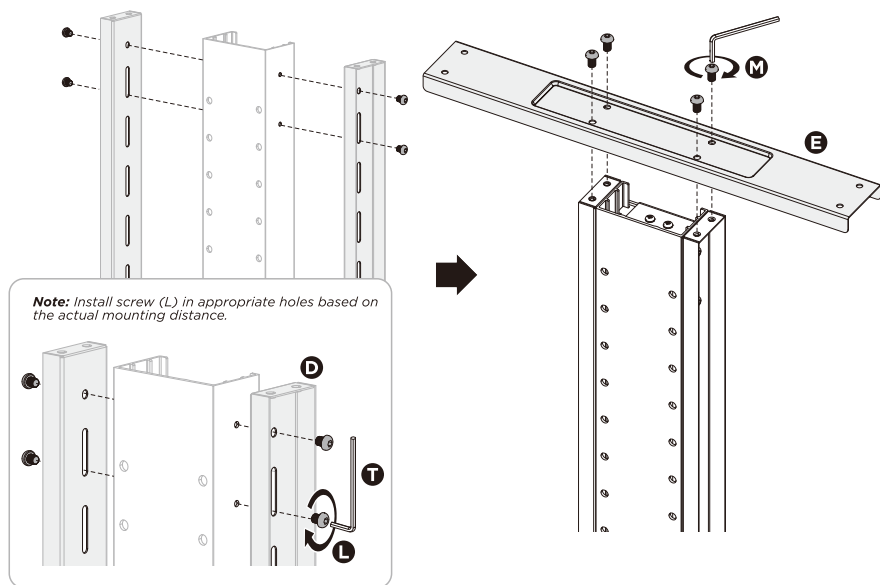 



4

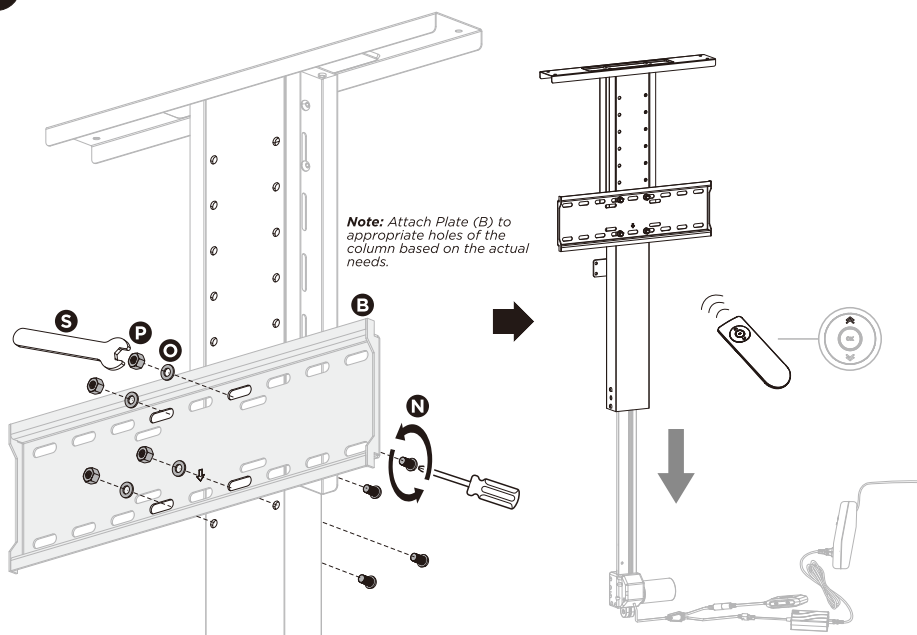 

Ceilingmount proceduere




  Please prepare a proper cabinet before installation.

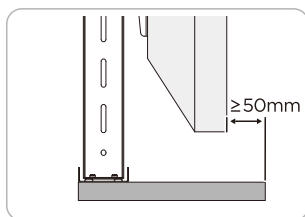
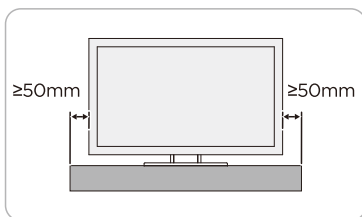


Two ways for ceilingmounting



 
a. Install below the ceiling

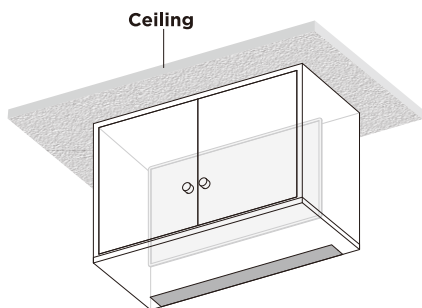

  
b. Install above the ceiling

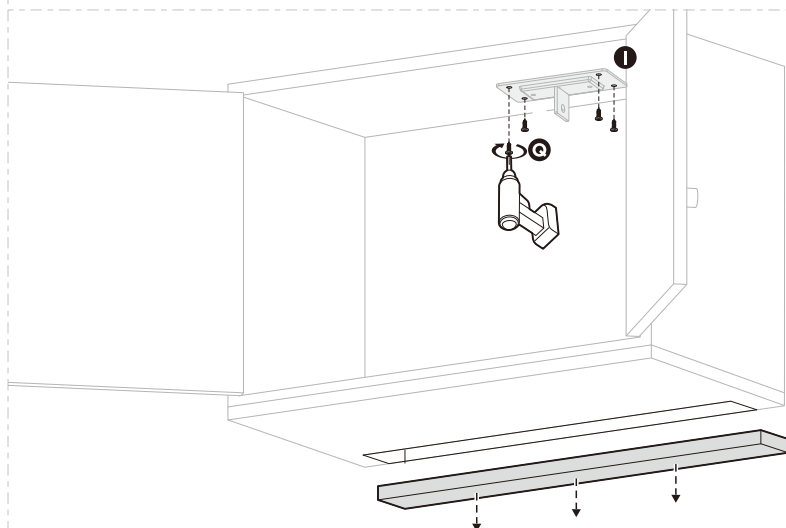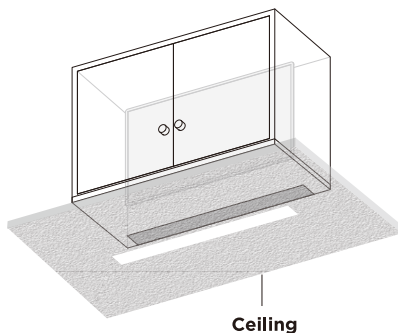

Ceilingmount procedure

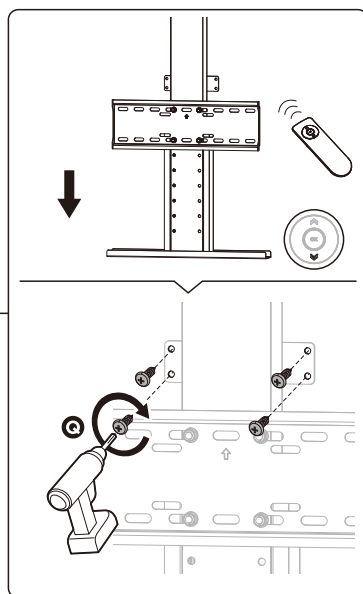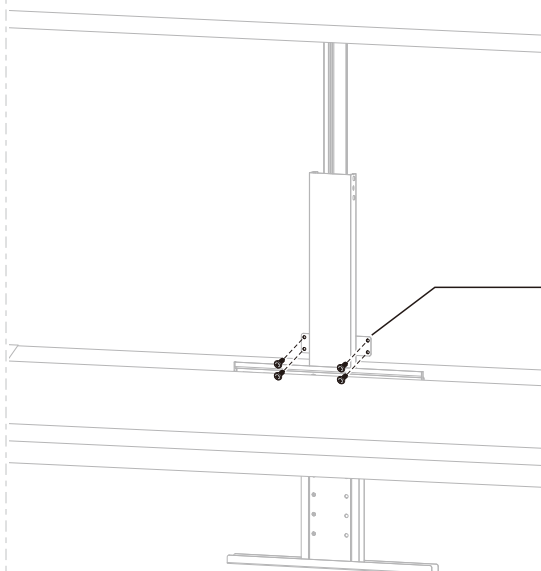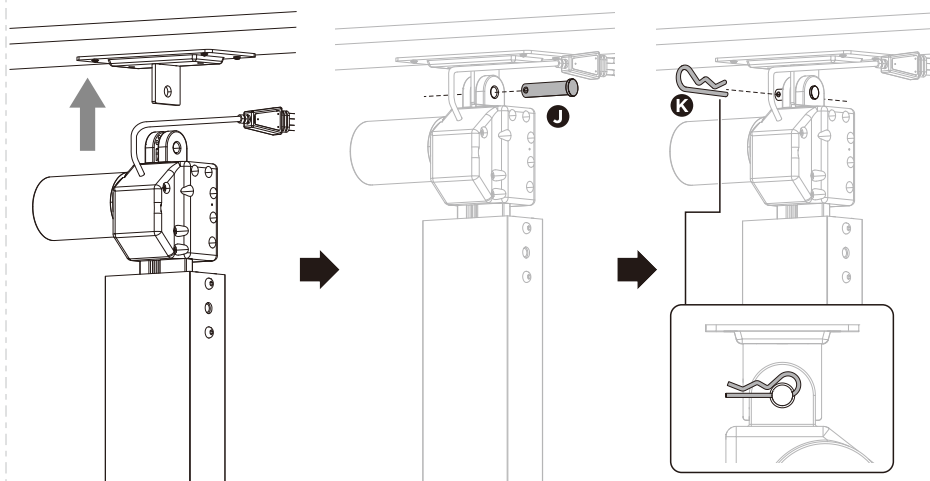   

Ceilingmount procedure



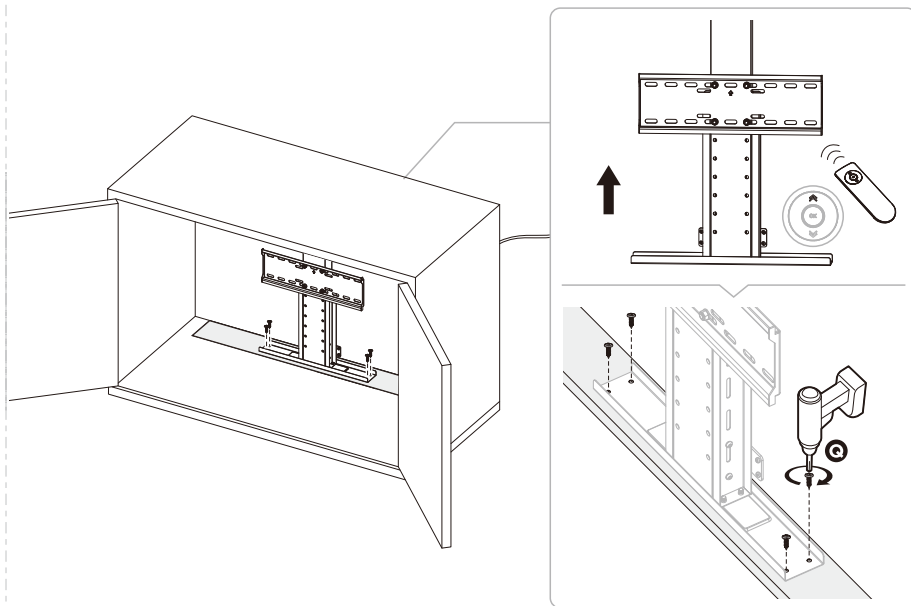 


5b



Floormount procedure




 
 
 
Please prepare a proper cabinet before installation.

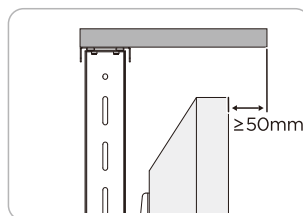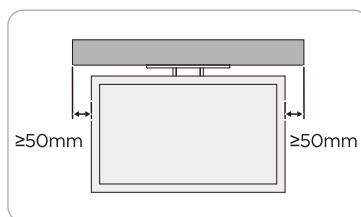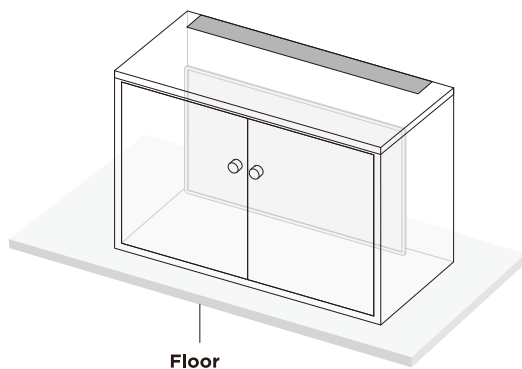




Floormount procedure

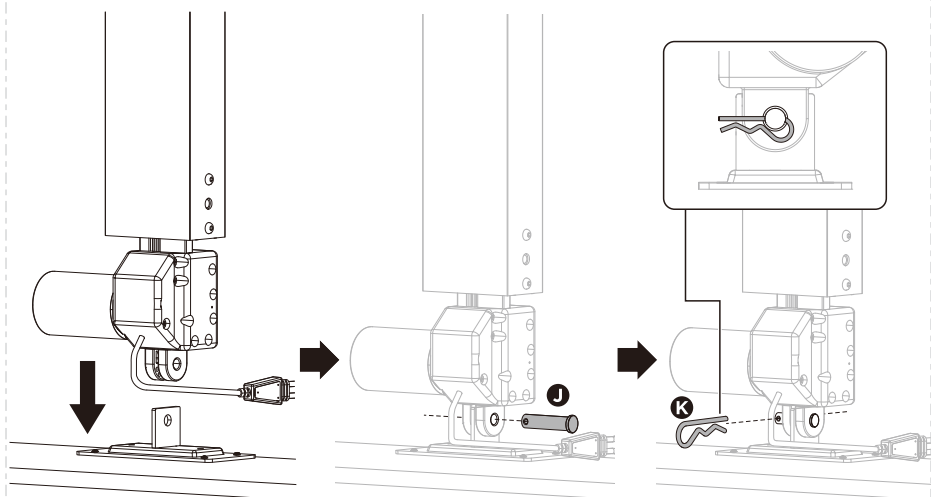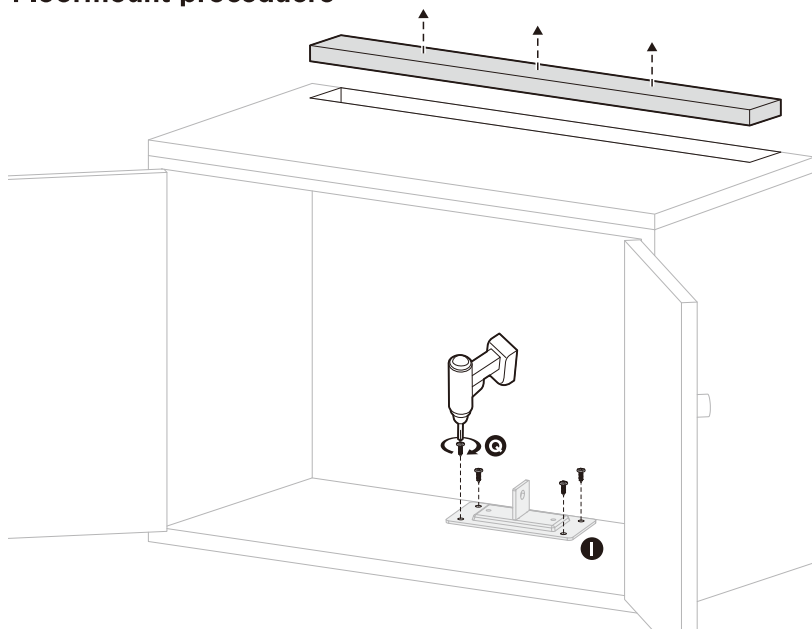  

Floormount procedure

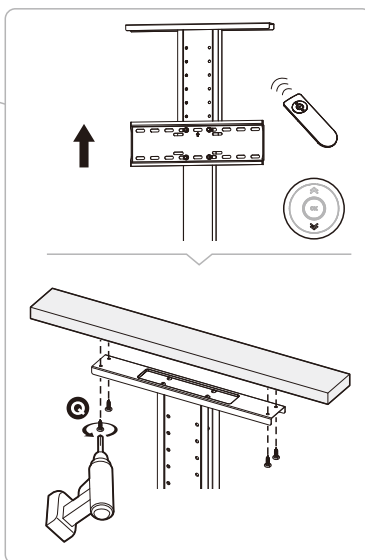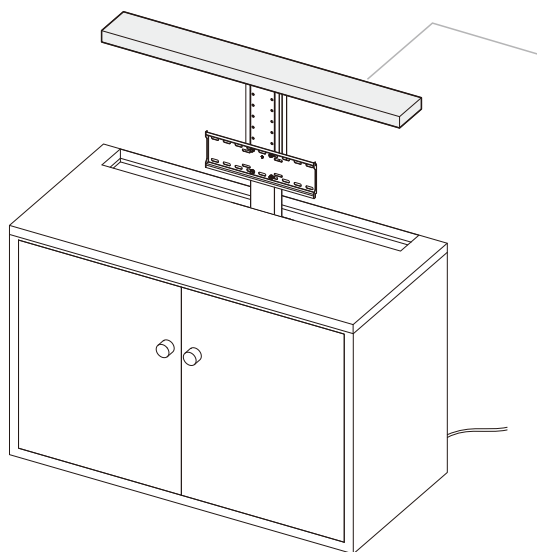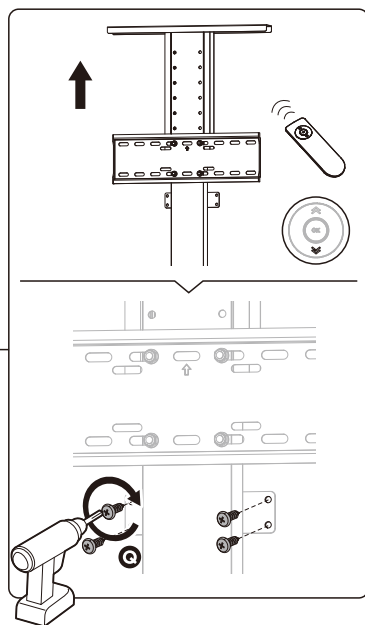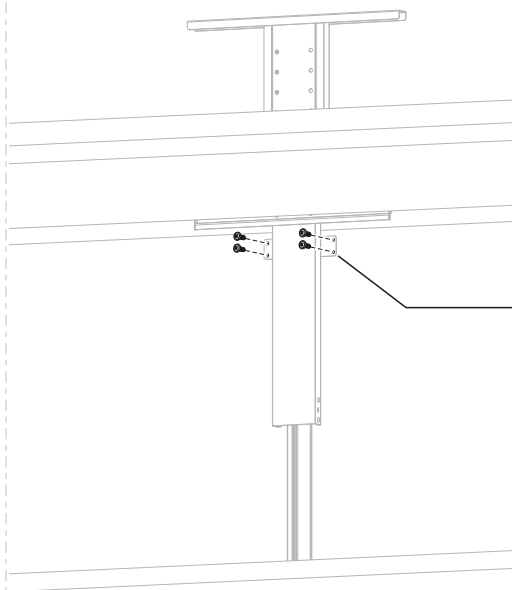    

6


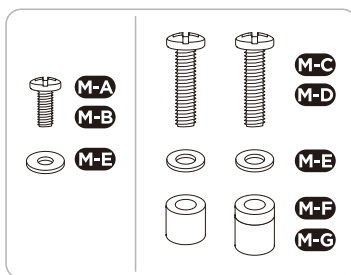 
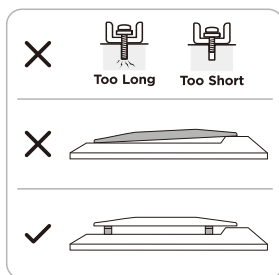 
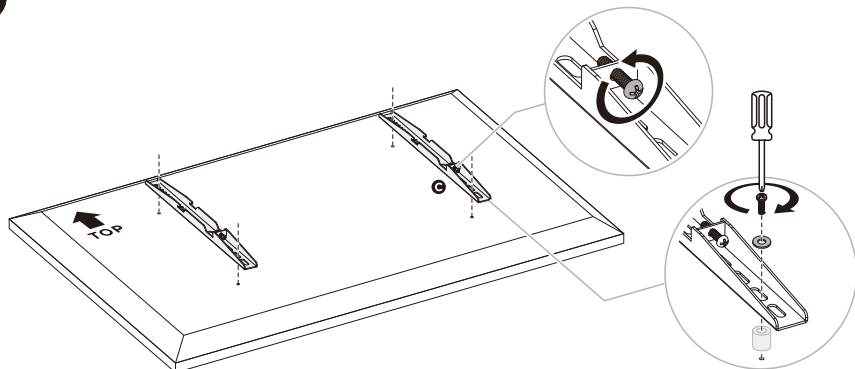 


7

Ceiling Mounting



    Floor Mounting

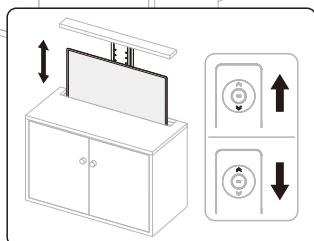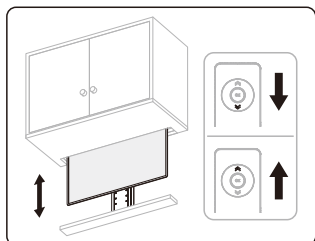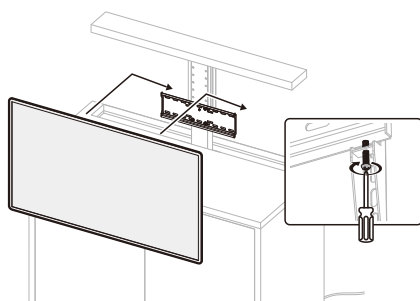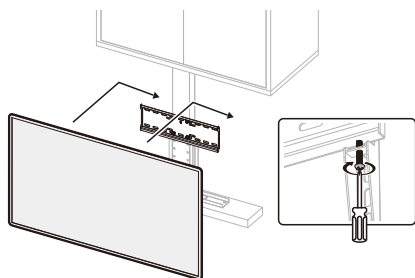

The product is powered by electricity. In order to avoid burns, fire and electric shock and make sure the safe and correct use of the system and maintain the longevity of the overall construction and the built-in electronics, please read the instructions carefully.

Warnings

- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge must not use the appliance, unless they're under supervision, understand the hazards involved or they have been thoroughly instructed in the use of the apparatus by a person who is responsible for the safety of these persons.
- Don't leave the cords or plug unorganized in order to prevent tripping hazards.
- Any attempts to reconstruct the construction aren't allowed.

Electrical Safety Instructions

- The appliance is only to be used with the power supply unit provided with the appliance. Alterations of the given power unit aren't allowed.
- Never operate the system with a damaged power supply cord or plug. If any parts is damaged, please contact your service agent of purchase for a replacement.
- Never operate the system if it's in moist environment or its electrical components has contact with liquids.
- Don't clean the product while the power is still connected.
- Don't disassemble or replace components while the power is still connected.
- Unplug the appliance when the system isn't in use, and place the power plug out of children reach.

Remote Control Operation Instructions



Note: The remote control is powered by two AAA batteries (not included).



A. Coding of Remote Control and Control Box

STEP1: Double press "  " button of the control box to turn on the indicating light and enter program coding mode.

STEP2: Press and hold "  " + "  " button on the remote control to enter program coding mode with the back light flashing. Keep pressing the two buttons until the back light stops flashing and the light of control box is off indicating success.

Note: If program coding fails because of the timeout, repeat above steps until successful.

B. Button Functions

Remote Control

1. Upward/Downward Movement

Ceiling Mounting: Press and hold the "  " button, and the mount will move upward. Press and hold the "  " button, and the mount will move downward.

Floor Mounting: Press and hold the "  " button, and the mount will move upward. Press and hold the "  " button, and the mount will move downward.

(Note: Clear up all obstacles within the range of motion.)

2. Default Position

Ceiling Mounting: Press the "  " button and the mount will automatically move upward to the default highest position.

Floor Mounting: Press the "  " button and the mount will automatically move downward to the default lowest position.

Control Box

1. Program Coding

Double press the "  " button to turn on the indicating light and enter program coding mode.

2. Default Position

Ceiling Mounting: Press and hold the "  " button, and the mount will move upward to the default highest position.

Floor Mounting: Press and hold the "  " button, and the mount will move downward to the default lowest position.

Troubleshooting Guide

In Front

This Troubleshooting Guide will assist you in identifying and solving common problems and answering questions you may have about the product. Contact your place of purchase should the answer to your question or problem not be found in this Troubleshooting Guide and/or for any after service parts and sales support.

Possible reasons motorized mount does not respond to remote control.

TV Mount

- The AC/DC end of the power cord may be unplugged/disconnect from the outlet/mount. Check the connection to ensure the unit has power.
- Incorrect operation. Please follow the instructions found in the manual to properly operate the mount.

Remote Control&ControlBox

- The remote control operating distance may be too far and not in range of the mount. Acceptable range should be less than 30 feet (10m).
- The battery in the remote control may be low or dead. Replace the batteries.
- The program coding may fail. Follow the instructions to operate coding of remote control and control box.
- The remote control, linear actuator or control box may be broken. Check to see if the indicator LED lights on when any button is pressed. If not, contact your place of purchase for a replacement.