

Master Buds 2



Please refer to this manual before using the product


Table of Contents

• What's in the box	01
• Specifications	02
• Power and Pairing	03-04
• Reset and Sizing	05
• Charging	06
• Controls	07-08
• Clean the earbuds and charging case	09
• Sidetone & Motion control	10
• Warranty	11
• Important Safety Instructions	12-14
• FCC statement	15
• Safety For You And Your Device	16

What's in the Box



 Master Buds 2 x 1

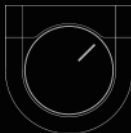

Charging Case x 1



USB Type-C charging cable x 1



Ear-tips & Ear-wings x 2

 
Product Specifications

- Model Name: Master Buds 2
- Model No.: Buds 001
- Earbud weight: 5.2g each
- Speaker driver size: 10mm
- Supported profiles: A2DP/AVRCP/HFP/SPP/AVDTP
- Bluetooth version: 6.1
- Earbud charging time: 1 hour
- Input Voltage: 5V
- Playtime without ANC: 6 hours
- Playtime with ANC: 4 hours
- Bluetooth range: 10m
- Waterproof rating: IPX5
- Working temperature: 0-45°C

Charging Specifications

- Charging case weight: 52g
- Charging port: Type-C
- The number of earbud charges from the case: 6 times
- Case charging time: Up to 60 mins
- Total playtime with charging case (without ANC): 30 hours
- Total playtime with charging case (with ANC): 20 hours

Power On/Off

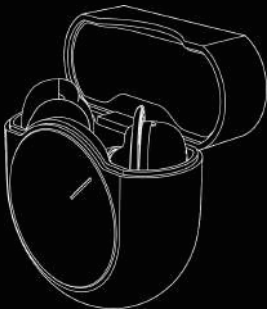

Power On: The earbuds will automatically turn on, on opening the charging case.

Power Off: The earbuds will automatically turn off once placed inside the charging case with the lid closed.

 
 
Pairing

After Powering On for the first time, Master Buds 2 will automatically enter pairing mode and the white LED will start breathing. Search and select Master Buds 2 from the list of available Bluetooth devices. Once the connection is successful, the light will turn off.

Your Master Buds 2 are now paired with your device and ready to use.

Pressing and holding the charging case button for 3s is another way to bring the device into pairing mode.

Note: Your Master Buds 2 will automatically connect to the last paired device as soon as it is powered on.

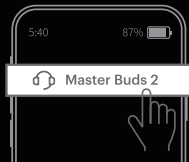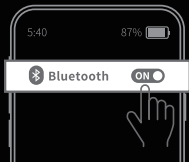

Reset / Clear the earbuds device list

1. Make sure your earbuds are fully charged.
2. On your paired devices, delete/remove Noise Master Buds 2 from the list of paired devices in the Bluetooth menu
3. Insert both earbuds into the charging case and long press the charging case button for 15 seconds
4. The Orange LED on the charging case will start blinking, to indicate earbuds have been reset.

Choosing your eartip & earwing size

Earbuds are fitted with medium-sized tips. However, if you find that they don't fit perfectly, please remove them and try the combinations of small and large eartips and earwings.

Note: Master Buds 2 comes with 9 different combinations of eartips and earwings to match your personal fit and comfort.



Charging

Earbuds

Place both earbuds inside the case to charge them.

Indication (on case)

- White LED Blink and then OFF = Charging



Charging

CHECK THE EARBUD BATTERY LIFE

While using the earbuds

- When you remove the earbuds from the charging case and insert them into your ears, a voice prompt announces the earbud battery level when battery is low.
- Use the Noise Audio APP. The earbud battery level is displayed on the main screen.

CHARGING (Case)

Charge the case via the supplied Type-C charging cable, preferably from any PC or laptop as compared to a USB charger.

Indication (on case)

- Orange LED Stay = Charging



Charging

- Solid White LED = Fully charged



Fully Charged

Control

What to do

 Play/Pause	Tap either earbud twice   Tap twice   Tap twice
 Previous Song	Tap the left earbud thrice   Tap thrice
 Next Song	Tap the right earbud thrice   Tap thrice
 Volume Up	Tap the right earbud once   Tap once
 Volume Down	Tap the left earbud once   Tap once
 Spatial Audio	Tap the right earbud 4 times   Tap 4 times

 Answer Call	Tap either earbud twice   Tap twice Tap twice
 End Call	Tap either earbud twice   Tap twice Tap twice
 Reject Call	Touch and hold either earbud for 2 seconds   Touch and hold Touch and hold
 Switch Modes (Transparency/Normal/ANC)	Long press the right earbud for 3 seconds  Touch and hold
 Noise AI Initiation	Long press the left earbud for 3 seconds  Touch and hold Note : Noise AI requires the Noise Audio App to run in the background.

Clean the earbuds and charging case

Component	Cleaning instructions
Eartips & Earwings	Remove the eartips & earwings from the earbuds and wash them with mild detergent and water. Note: Make sure you thoroughly rinse and dry the eartips & earwings before re-attaching them to the earbuds.
Earbud nozzles	Wipe only with a dry, soft cotton swab or equivalent. Caution: Never insert any cleaning tool into the nozzle.
Charging contacts (on earbuds)	To prevent corrosion, wipe with a dry, soft cotton swab or equivalent.
Charging case	Wipe only with a dry, soft cotton swab or equivalent.

Sidetone

Sidetone lets you hear your own voice through your headset while you talk. This helps you speak at a normal, comfortable volume instead of accidentally shouting during your calls.

Motion Control

Control your music and call effortlessly with simple head movements, just a nod or shake to answer, reject, or manage playback, completely hands-free.

- **Left and Back:** Turn your head left and return to the center twice to skip to the previous track.
- **Right and Back:** Turn your head right and return to the center twice to skip to the next track.
- **Nod:** Nod your head up and down twice to play/pause audio or answer a call.
- **Head Shake:** Shake your head left and right twice to reject an incoming call.



Left & Back x 2



Nod x 2



Right & Back x 2



Head Shake x 2

Warranty

The warranty covers your Noise product, including accessories, against manufacturing defects (if any) for 1 year from the date of purchase.

 
Things that are not covered in the warranty are listed below:

Unauthorised tampering, modifications or repairs of the product.

Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not by the product manual or documentation or any other instruction provided along with the Noise product.

For further information on product replacement/refund-related queries, please refer to the terms and conditions mentioned in our online return policy section on **www.gonoise.com**.

www.gonoise.com/pages/warranty-registration

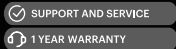

SCAN ME

Customer Query

For any assistance, please reach out to us at support.gonoise.in

Important safety instruction

- Do not disassemble.
- Keep out of the reach of children. The product contains small parts which may be a choking hazard.
- The battery shall not be exposed to excessive heat such as sunshine, fire or the like.
- Do not use the product in environments with too high or too low temperatures, and never expose the product to strong sunshine or very wet environments.
- Ensure there is no liquid, sweat or water on the charging port when charging.
- Refer to your user manual for your earphones' waterproof level and follow the corresponding instructions.
 - For IPX4: Do not expose earphones to dripping or splashing water.
 - For IPX4, IPX5, and IPX6: Do not submerge earphones in water.



Hearing Safety

- To avoid hearing damage, do not listen for extended periods at high volume.
- Do not turn the volume so high that you're unable to hear your surroundings.
- Do not use earphones while driving.
- You should use caution or temporarily discontinue use in potentially hazardous situations.



This product complies with the radio interference requirements of the Indian Community.



The product generates stronger permanent magnetic fields that could cause interference with cardiac pacemakers, implanted defibrillators (ICDs) and other implants. Always maintain a distance of at least 3.94"/10 cm between the product component containing the magnet (earbuds and charging case) and the cardiac pacemaker, implanted defibrillator, or other implant.



This symbol means the product must not be discarded as household waste, and should be delivered to an appropriate collection facility for recycling. Follow local rules and never dispose of the product and rechargeable batteries with normal household waste. Correct disposal of old products and rechargeable batteries helps prevent negative consequences for the environment and human health.



This symbol indicates "separate collection" for all batteries and accumulators. Danger of explosion if battery is incorrectly replaced. To reduce risk of fire, explosion or leakage of flammable liquid/gas, don't disassemble, crush, puncture, short external contacts, expose to temperature above 60°C (140°F), sunshine or like, expose to extremely low air pressure or dispose of in fire or water. Replace only with specified batteries.

High or low extreme temperatures that a battery can be subjected to during use, storage or transportation:

- During use: maximum 40°C (104°F)
- Storage: -20 - 45°C (-4 - 113°F)
- Transportation: 5 - 35°C (41 - 95°F)

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Safety For You And Your Device

Follow these tips to get the best out of your new Master Buds 2.



Do not expose the headphone to liquids, moisture, or humidity as they have electronics and batteries inside.



Do not try to disassemble your headphone. There are no user-serviceable parts inside it.



Do not use abrasive cleaning solvents to clean your new headphone. Wipe them down with a slightly damp cloth if and when necessary.



Avoid dropping the headphone and keeping them away from sharp objects such as keys in your pockets.



Do not use abrasive cleaning solvents to clean your new headphone. Wipe them down with a slightly damp cloth if and when necessary.



Only charge your headphone from 5V/1A ports such as phones and laptops or PC chargers.



Do not throw the headphone in a fire to dispose them. The internal battery may explode.



Avoid listening to music at a high volume or you may permanently damage your hearing.



Pay attention to your surroundings and never wear any headphone while riding, driving, or walking in traffic.

noise

SOUND BY
BOSE